

Penn Reel Parts list for:

Model: 5000CQ (also known as CQR5000) Conquer

KEY NO	PART NO.	DESCRIPTION	KEY NO	PART NO.	DESCRIPTION
1	1-5000CQ	HOUSING	46A	46A-2000CQ	SCREW
1A	1A-5000CQ	HOUSING PLATE	46S	46S-2000CQ	SPRING
8	8-5000CQ	MAIN GEAR	47	47-5000CQ	SPOOL ASSEMBLY
8A	8A-5000CQ	SHIM	47P	47P-5000CQ	SPOOL (ONLY)
15	15-5000CQ	HANDLE ASSEMBLY	47B	47B-5000CQ	SPOOL BAND
19	19-5000CQ	PINION	47C	47C-5000CQ	SPOOL LIP COVER
20A	20A-5000CQ	BALL BEARING (USES 4)	47D	47D-2000CQ	LINE CLIP
21	21-2000CQ	BEARING RETAINER	47E	47E-2000CQ	LINE CLIP SPRING
21A	21A-2000CQ	SCREW (USES 3)	47L	47L-5000CQ	SPOOL LIP
21B	21B-5000CQ	COLLAR	48	48-5000CQ	SPOOL CLICK
22	22-2000CQ	SCREW (USES 2)	48A	48A-5000CQ	SPOOL CLICK RETAINER
24	24-5000CQ	BAIL WIRE	48B	48B-5000CQ	SPOOL CLICK HOUSING
25	25-5000CQ	BAIL CAM	48D	48D-5000CQ	SPACER RING
25A	25A-2000CQ	O-RING	48E	48E-5000CQ	O-RING
25B	25B-2000CQ	CLIP	51A	51A-2000CQ	SCREW (12 REQUIRED)
27	27-5000CQ	ROTOR	52	52-5000CQ	DRAG KNOB ASSEMBLY
27A	27A-5000CQ	BAIL PIVOT COVER	56	56-5000CQ	DRAG WASER HT-100 (4 REQUIRED)
28	28-5000CQ	TRIP LEVER	57	57-5000CQ	KEYED WASHER (3 REQUIRED)
28D	28D-5000CQ	FRICTION RING	58	58-5000CQ	EARRED WASHER
28E	28E-5000CQ	FRICTION RING COVER	58A	58A-5000CQ	EARRED WASHER
28S	28S-2000CQ	FRICTION RING SCREW (USES 3)	60	60-5000CQ	SPACER WASHER
31	31-2000CQ	SCREW (USES 2)	60A	60A-2000CQ	O-RING
32	32-5000CQ	BAIL SPRING	60B	60B-2000CQ	BALL BEARING
34	34-5000CQ	BAIL ARM	60C	60C-5000CQ	BEARING SLEEVE
34B	34B-5000CQ	PIVOT LEVER	60S	60S-2000CQ	SEAL
34C	34C-2000CQ	PIVOT ARM	60W	60W-5000CQ	SPOOL SHAFT WASHER
35	35-5000CQ	LINE ROLLER	64	64-5000CQ	IDLER GEAR
35A	35A-2000CQ	BALL BEARING (USES 4)	95B	95B-2000CQ	ROTOR LOCKING PLATE
36	36-2000CQ	SCREW, LINE ROLLER	97	97-2000CQ	CLUTCH SPRING
38	38-5000CQ	ROTOR NUT	98C	98C-5000CQ	CLUTCH/SLEEVE ASSEMBLY
38A	38A-2000CQ	SCREW, ROTOR LOCKING PLATE	132A	132A-2000CQ	SPACER (2 REQUIRED)
39	39-5000CQ	SPOOL SHAFT	226	226-5000CQ	REAR COVER
43	43-5000CQ	CROSSWIND BLOCK	227	227-5000CQ	CAM COVER
43A	43A-5000CQ	CROSSWIND BLOCK PIN (2 REQUIRED)	231	231-5000CQ	CROSSWIND GEAR
44	44-2000CQ	SCREW, CROSSWIND BLOCK	231B	231B-2000CQ	CROSSWIND GEAR SCREW
45	45-5000CQ	MAINTENANCE HATCH	232	232-5000CQ	BEARING RETAINER (2 REQUIRED)
46	46-2000CQ	SCREW	233	233-5000CQ	BEARING COVER

NOTE: Many of www.pennparts.com schematics include changes that were either made by Penn, or errors found and corrected by our parts dept.
SBT Ver. 020410

It is likely that Penn will only sell the 47-5000CQ spool assembly rather than the 47P bare spool.