



## Penn Reel Parts list for Model: 50TW

INTERNATIONAL II SPEED

KEY	PART		KEY	PART	
NO	NO.	DESCRIPTION	NO	NO.	DESCRIPTION
2	2-50	QUADRANT RING		38-7	COUPLING PLATE SCREW (3 REQ.)
4	4-50	CAM THRUST WASHER	38C	38-80	QUADRANT SCREW
5	5-50W	MAIN GEAR		41-50	L.S. BEARING SPRING
6	6-155	SPACER WASHER		46A-704	CAM HOUSING SCREW (2 REQ)
7	7-50	FLOATING DRAG WASHER	54	54-50T	HARNESS LUG (2 REQ.)
9	9-30	SPACING SLEEVE	55	55-50	BALL BEARING (3 REQ.)
13	13-50W	PINION GEAR	55A	55-80	BALL BEARING (1 REQ.)
13B	13B-50TW	SPOOL SLEEVE	59	59-50	SLOTTED WASHER
14	14-50	DOG SPRING (2 REQ.)	60	60-50	BACKING WASHER
15	15-50	DOG (2 REQ.)		62-50	CLICK SPRING
18	18-50W	DISC CLUTCH SPRING (2 REQ.)		63-30T	STAND SCREWS (4 REQ.)
18A	18-50TW	DISC CLUTCH SPRING (2 REQ.)	63A	63A-50	LONG SCREW
19	19-50W	ECCENTRIC CAM		63-50	SCREW
21	21-50	ECCENTRIC LEVER	69B	69B-50	RETAINING RING
22	22-109	DOG SPRING SCREW		81-50	RATCHET
	23-114	HANDLE SCREW		91N-50	HANDLE RIVET
24	24-50T	HANDLE COMPLETE		95-50	CLICK TONGUE BUSHING
24C	24C-50	HANDLE KNOB CAP		95A-20	CLICK BUSHING WASHER
25	25-50	HANDLE KNOB	95B	95A-50	CLICK BUSHING WASHER
27	27-50T	L.S. PLATE ASSEMBLY	101	101-30	RATCHET PLATE SCREW (4 REQ.)
29L	29L-50TW	SPOOL		110-50	HANDLE LOCK SCREW
	30-50T	STAND		110A-50	HANDLE LOCKING PLATE
31	31T-20	SHORT QUADRANT SCREW		112-50	ECCENTRIC LEVER KNOB
32	32-14CH	CENTER QUADRANT SCREW		112A-50	ECCENTRIC KNOB SCREW
	33-114	ROD CLAMP		113-50	ECCENTRIC LEVER CAP
*	33R-114	RINGED ROD CLAMP (OPTIONAL)	117	117DN-50	OUTER DRIVE PLATE ASSEMBLY
	34-50T	CLAMP SCREW (2 REQ.)	119	119-50	COUPLING PLATE
34C	34C-50T	ROD CLAMP SCREW W/NUT	123	123-50	DRAG COVER SCREW (4REQ.)
36A	36-700	CLICK BUTTON NUT		125-50S	CAM HOUSING
	36S-80ST	CLICK BUTTON CAP	*	124-50	BRIDGE COVER
	38T-50	FRAME SCREW (9 REQ.) (38-50) (T=TORQ)	*	125-50	CAM HOUSING
38A	38-710	CLICK BUSHING NUT			

PAGE 2 OF 3

134	134-50	GEAR STUD	156A	156A-50	DRAG COVER SEAL			
134	134A-50	GEAR STUD WASHER	157	157-50	QUADRANT SPACER BUSHING (2 REQ.)			
141	141-50	CAM FOLLOWER	173	173-50T	SPOOL BUSHING			
142	142-50	CAM FOLLOWER PIN (2 REQ.)	183	183-50TW	TUBE FRAME			
143	143-50	ADJUSTING SCREW	264	264-30T	STAND GASKET			
144	144-50	PRESET KNOB		SHOWN				
152A	152A-50T	ROD CLAMP ACORN NUT (2 REQ.)						
*	154-50	SHIM, SPOOL SHAFT						
156	6 156-50 DRAG COVER							
	NOTE:	Many of www.pennparts.com schematics include changes that were either						
		made by Penn, or errors found and corrected by	ade by Penn, or errors found and corrected by our parts dept.					
		SBT Ver. 082816 (Based on Penn's Rev 6 7-21-	•	·				
		·	•					
	OLDER DESIGI	N		NEWER DESI	<u>GN</u>			
1	<u>OLDER DESIGI</u> 1-50T	<u>N</u> RIGHT SIDE PLATE ASSEMBLY	1	<u>NEWER DESI</u> 1-50TN	<u>GN</u> RIGHT SIDE PLATE ASSEMBLY			
1 *			1					
	1-50T	RIGHT SIDE PLATE ASSEMBLY	1 35		RIGHT SIDE PLATE ASSEMBLY			
*	1-50T 3-50	RIGHT SIDE PLATE ASSEMBLY BRIDGE	·	1-50TN	RIGHT SIDE PLATE ASSEMBLY (BRIDGE NOW PART OF PLATE)			
* 35	1-50T 3-50 35-50	RIGHT SIDE PLATE ASSEMBLY BRIDGE CLICK TONGUE	35	1-50TN 35-50N	RIGHT SIDE PLATE ASSEMBLY (BRIDGE NOW PART OF PLATE) CLICK TONGUE			
35 36 	1-50T 3-50 35-50 36-50	RIGHT SIDE PLATE ASSEMBLY BRIDGE CLICK TONGUE CLICK BUTTON	35 36	1-50TN 35-50N 36N-50 36C-50	RIGHT SIDE PLATE ASSEMBLY (BRIDGE NOW PART OF PLATE) CLICK TONGUE CLICK BUTTON			
35 36 	1-50T 3-50 35-50 36-50 	RIGHT SIDE PLATE ASSEMBLY BRIDGE CLICK TONGUE CLICK BUTTON 	35 36 *	1-50TN 35-50N 36N-50 36C-50	RIGHT SIDE PLATE ASSEMBLY (BRIDGE NOW PART OF PLATE) CLICK TONGUE CLICK BUTTON CLICK BUTTON COMPLETE ASSEMBLY			
35 36  39A	1-50T 3-50 35-50 36-50  39-50	RIGHT SIDE PLATE ASSEMBLY BRIDGE CLICK TONGUE CLICK BUTTON  COVER SCREW (3 REQ.)	35 36 * 39A 98	1-50TN 35-50N 36N-50 36C-50 39A-80S	RIGHT SIDE PLATE ASSEMBLY (BRIDGE NOW PART OF PLATE) CLICK TONGUE CLICK BUTTON CLICK BUTTON COMPLETE ASSEMBLY COVER SCREW (3 REQ.)			
35 36  39A	1-50T 3-50 35-50 36-50  39-50 98-50T	RIGHT SIDE PLATE ASSEMBLY BRIDGE CLICK TONGUE CLICK BUTTON  COVER SCREW (3 REQ.) BRIDGE BUSHING	35 36 * 39A 98 erences	1-50TN 35-50N 36N-50 36C-50 39A-80S	RIGHT SIDE PLATE ASSEMBLY (BRIDGE NOW PART OF PLATE) CLICK TONGUE CLICK BUTTON CLICK BUTTON COMPLETE ASSEMBLY COVER SCREW (3 REQ.)			
35 36  39A	1-50T 3-50 35-50 36-50  39-50 98-50T	RIGHT SIDE PLATE ASSEMBLY BRIDGE CLICK TONGUE CLICK BUTTON  COVER SCREW (3 REQ.) BRIDGE BUSHING Key 39A cover screws are a different length due to plate different	35 36 * 39A 98 erences plates	1-50TN 35-50N 36N-50 36C-50 39A-80S 98-50TN	RIGHT SIDE PLATE ASSEMBLY (BRIDGE NOW PART OF PLATE) CLICK TONGUE CLICK BUTTON CLICK BUTTON COMPLETE ASSEMBLY COVER SCREW (3 REQ.) BRIDGE BUSHING			
35 36  39A	1-50T 3-50 35-50 36-50  39-50 98-50T	RIGHT SIDE PLATE ASSEMBLY BRIDGE CLICK TONGUE CLICK BUTTON  COVER SCREW (3 REQ.) BRIDGE BUSHING Key 39A cover screws are a different length due to plate different The 36C-50 click button assembly can be used on the older	35 36 * 39A 98 erences plates	1-50TN 35-50N 36N-50 36C-50 39A-80S 98-50TN	RIGHT SIDE PLATE ASSEMBLY (BRIDGE NOW PART OF PLATE) CLICK TONGUE CLICK BUTTON CLICK BUTTON COMPLETE ASSEMBLY COVER SCREW (3 REQ.) BRIDGE BUSHING			

		AL LARIO.
69	69-50	LOCATING PIN (2 REQ.)
69B	69B-50	RETAINING RING (2 REQ.)
161	161-50	LOCATING PIN BUSHING (2 REQ.)
162	162-50	LOCATING PIN SPRING (2 REQ.)

## MERGED INTO ONE UNIT:

161C 161C-50 LOCATING PIN BUSHING ASSEMBLY (2 REQ.)

PAGE 3 OF 3