
 


60-LH  
Long Beach  
LEFT HAND VERSION

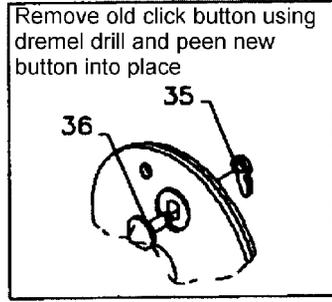

[www.PENNparts.com](http://www.PENNparts.com)



Penn Parts Dept.  
945 Radio Road  
Tuckerton NJ 08087  
(609) 296-1300  
No Minimum Order!  
Plus, Parts in stock  
that Penn doesn't  
carry anymore.

NOTE: Drawing was made by doing a mirror of the 60 reel schematic, so some of the left parts are not 100% precise as to left hand positioning.

## Penn Reel Parts list for Model: 60-LH (LEFT HAND Version) Longbeach

KEY PART			KEY PART		
NO	NO.	DESCRIPTION	NO	NO.	DESCRIPTION
1	1-60	HANDLE SIDE PLATE	22	22-60CH	ECCENTRIC SCREW
2	2-60	HANDLE SIDE RING	23	23-60	HANDLE SCREW
3	3-66LH	BRIDGE W/ SLEEVE (LEFT HAND)	23A	110-60	HANDLE LOCK SCREW
4	4-60	FIBER WASHER	24	24-66	HANDLE
5	5-60LH	MAIN GEAR (LEFT HAND)	26	26-60	HANDLE SIDE BEARING
6	6-60	DRAG WASHER (3 REQ.)	27	27-60	NON-HANDLE SIDE PLATE ASSEMBLY
7	7C-60	METAL WASHER	28	28-60	NON-HANDLE SIDE RING
8	8-60	TENSION SPRING	29	29L-85	SPOOL
9	9-60	SPACING SLEEVE	30	30-60	STAND
10	10-60LH	STAR DRAG WHEEL (LEFT HAND)	31	39-4CH	STAND SCREW, BOTH SIDES
11	11-60	ECCENTRIC JACK	35	35-60	CLICK TONGUE
12	12-60	PINION YOKE	36	36-209	CLICK BUTTON
13	13-85LH	PINION (LEFT HAND)	37	37-60	FRAME POST
14	14-99	DOG SPRING	38	39-5	POST SCREW, BOTH SIDES
15	15-99	DOG	40	40-60	NON-HANDLE SIDE BEARING
16	16-60CH	LOWER BRIDGE SCREW (2 REQ.)	41	41-60	NON-HANDLE SIDE BEARING SPRING
17	17-60CH	UPPER BRIDGE SCRW (2 REQ.)	62	62-309	CLICK SPRING
18	18-60	CLUTCH SPRING (2 REQ.)	62A	63-209	CLICK SPRING SCREW
19	19-60	ECCENTRIC	98	98-60LH	GEAR SLEEVE (LEFT HAND)
20	20-60LH	ECCENTRIC SPRING (LEFT HAND)			
21	21-285	ECCENTRIC LEVER			

NOTE: Many of [www.pennparts.com](http://www.pennparts.com) schematics include changes that were either made by Penn, or errors found and corrected by our parts dept.  
SBT Ver. 070415

Change: Older reels prior to 1953 used the 14-60 bent copper dog spring.  
After 1953, this changed to the current 14-99 coiled dog spring.

### CLICKER RELATED NOTES/PART CHANGE INFO

#### INSTALLATION:

To replace the click tongue on models where it is peened into place, use a dremel drill with a fine tip to remove the old click tongue and click button. Then peen the new 36-209 into place.

#### OPTIONAL:

Any reel that uses the 36-209 button can use:

36N-209 button and a 69B-600 removable c clip

This newer style is held by the clip instead of being peened in place.