



PARTS LIST FOR MODEL
FATHOM II 20LWLH
REEL PART NO. 1481308

Key No.	Penn Style No.	Part No.	Description
1	1-FTHII20LWLH	1488805	Left Side Plate Assembly
1D	1D-FTHII20LWLH	1488806	Gearbox Cover
4	4-FTHII30LW	1488726	Drag Washer
5	5-FTHII20LWLH	1488807	Main Gear
6	6-20	1188705	Tab Drag Washer (3 req)
7	7-FTHII20LW	1488788	Keyed Metal Drag Washer (2 req)
7H	7H-FTHII20LW	1488789	Heavy Metal Drag Washer
8	8-20	1188709	Spring Washer (2 req)
9	9-FTHII30LW	1488731	Spacer Sleeve
9B	9B-FTHII30LW	1488732	Retainer Ring (3 req)
9C	9C-FTHII30LW	1488733	Retainer Ring
9D	9D-FTHII30LW	1488734	Bearing Cover

Key No.	Penn Style No.	Part No.	Description
10	10-FTHII30LWLH	1488835	Star Drag
10A	10A-20	1188711	Star Click Retainer
10B	10B-20	1188710	Star Click Washer
10C	10C-525MAG2	1188712	Star Click Spring
11	11-FTHII20LW	1488790	Eccentric Jack Assembly
12	12-FTHII30LW	1488737	Pinion Yoke
12A	12A-FTHII30LW	1488738	Yoke Post Bushing (2 req)
12B	12B-FTHII30LW	1488739	Pinion Yoke Screw (2 req)
13	13-FTHII20LWLH	1488808	Pinion
15	15-20	1188675	Anti Reverse Dog (3 req)
18	18-20	1188688	Pinion Yoke Spring (2 req)
18A	18A-20	1188714	Keyed Spring Washer

Key No.	Penn Style No.	Part No.	Description
19	19-FTHII30LWLH	1488837	Eccentric
20	20-FTHII30LWLH	1488838	Eccentric Spring
21	21-FTHII20LW	1488792	Eccentric Lever
21A	21A-FTHII30LW	1488744	Eccentric Washer
22	22-20	1188690	Eccentric Screw
23	23-FTH20LW	1208117	Handle Assembly Screw
23A	23A-20	1188717	Handle Lock Screw
23B	23B-20	1207784	Handle Screw Washer
23L	23L-750	1191283	Screw
24	24-20	1188716	Handle Assembly
24A	24A-20	1188715	Handle Thrust Washer
24C	24C-66	1191335	Cap- Handle Knob
25	25-TRQ40	1240293	Handle Knob
26	26-20	1188692	Bushing
26A	26A-FTHSD12	1242792	Washer (As Required)
26B	26B-FTHII30LW	1488746	Spool Tension Knob
26D	26D-525MAG2	1125769	Spool Tension Click Spring
26F	26F-525MAG2	1125768	Spool Tension Ratchet Inner
26G	26G-525MAG2	1125772	Spool Tension Ratchet Outer
26H	26-TRQ40NLD2	1265023	Bearing
27	27-FTHII20LWLH	1488809	Right Side Plate Assembly
29	29-FTHII20LW	1488794	Spool Sub Assembly
29A	29A-20	1188680	Spool Shaft Pin
29L	29L-FTHII20LW	1488795	Spool Assembly
33	33-113	1182754	Rod Clamp
33C	33C-TRQ40	1229936	Rod Clamp Kit
34	34-45	1182788	Screw (2 req)
35	35-20	1188656	Click Tongue
36	36-FTHII30LW	1488750	Alarm Button
36A	36A-FTH20LW	1208113	Click Washer
36B	36B-20	1188651	Click PVC Washer
38	38-FTH15LD2	1309885	Screw (8 req)
38A	38A-20	1188649	Flat Washer (8 req)
40	40-FTHII30LW	1497821	Ball Bearing 4x10x4
40A	40A-20	1188663	Ball Bearing Retainer
40B	40B-20	1188662	Felt Washer
40C	40C-525MAG2	1208115	Washer, Metal Thrust
40D	40D-525MAG2	1125771	Washer, Rubber Thrust
40E	40E-20	1188660	Bronze Washer
42	42-FTHII30LW	1488751	Worm Shaft Assembly
42B	42B-FTHII30LW	1488752	L. C. Idler Gear
43	43-FTHII30LW	1488753	Worm Shaft Bushing
46	46-FTHII20LW	1488796	Line Guide Assembly
46A	46A-FTHII30LW	1488755	Cover Plate Screw (2 req)
47	47-FTHII30LW	1488756	Line Guide Pawl
48	48-FTHII30LW	1488757	Line Guide Nut
50	50-FTHII30LW	1488758	Worm Shield
50B	50B-FTHII20LW	1488797	Level Wind Lock Plate
55	55-20	1188681	Ball Bearing 6x12x4
55A	55A-FTHII30LW	1497822	Ball Bearing 6x12x4
58	58-FTHII30LW	1488760	Line Guide Post
58A	58A-FTHII30LW	1488761	Line Guide Guard Post
60	60-20	1188670	Worm Shaft Washer
62	62-20	1188664	Click Spring
62A	62A-20	1188653	Click Spring Guard
62B	62B-20	1188665	Screw M2.6x7.5
62C	62C-20	1188654	Screw (5 req)
64	64-FTHII20LW	1488798	Idler Gear
64A	64A-40	1208073	Idler Gear
66	66-20	1188678	Spool Gear, Click Ratchet
69	69-SQL20LC	1308797	Retainer 2.5*6
69A	69-20	1188657	Retainer 3x7
69B	69B-40	1208064	Retainer 5x10
69C	69C-20	1188677	Retainer "C" Ring
91A	91A-TRQ40NLD2	1277514	Handle Knob Washer
98	98-FTHII30LWLH	1488840	Main Gear Shaft
98B	98B-FTHII30LW	1488764	IAR Bearing
98R	98R-FTHII30LW	1488765	Ratchet
98S	98S-FTHII30LW	1488766	Gear Stud Bushing
98W	98W-FTHII30LW	1488767	Thrust Washer
120	120-113H	1184522	O-Ring
149	149-45	1184702	Nut, Rod Clamp (2 req)
149A	149-200	1184706	Nut, Hex (2 req)
183	183-FTHII20LWLH	1488810	Frame Assembly

