

Penn Reel Parts list for Model: SAR64LP Sargus Baitcaster

| KEY | PART | | | PART | |
|----------|--------------------|---|------------|---------------------|---|
| | NO. | DESCRIPTION | NO | NO. | DESCRIPTION |
| 1 | 1-SAR | R.S. PLATE ASSEMBLY | 44 | 44-PUR | BUSHING L.S. WORM |
| 5 | 5-PUR | MAIN GEAR | 45 | 45-PUR | GEAR, WORM |
| 6 | 6-965 | WASHER, RATCHET | 45A | 45A-PUR | PIN, WORM SHAFT |
| | 6-PUR | WASHER, DRAG (3 REQUIRED) | 46 | 46-PUR | CARRIAGE ASSEMBLY |
| 7 | 7-PUR | WASHER, METAL EARRED | 47 | 47-PUR | PAWL, LINE GUIDE |
| 8 | 8-PUR | WASHER, HANDLE | 47A | 47A-PUR | WASHER, PAWL |
| | 10-PUR | STAR DRAG | 48 | 48-PUR | SCREW, PAWL COVER |
| | 10A-PUR | HOLDER, CLICK | 50 | 50-PUR | SHIELD, WORM SHAFT |
| | 10B-PUR | SPRING, CLICK LEAF | 50A | 50A-PUR | SCREW, R.S. PLATE |
| | 11-PUR | HOLDER, YOKE | 50B | 50B-PUR | SCREW, R.S. PLATE |
| | 11A-PUR | PAWL, RETURN | 50C | | SCREW, R.S FRAME |
| | 12-PUR | YOKE | 55 | 55-PUR | BEARING, L.S. PLATE |
| | 13-PUR | PINION GEAR | | 55A-PUR | BEARING, R.S. FRAME |
| | 18-965 | WASHER, DRAG SPRING (2 REQUIRED) | 55A 58 | 58-PUR | POST, LINE GUIDE |
| | | , | | | |
| | 18B-PUR 18C-PUR | SPRING, CLUTCH (2 REQUIRED) WASHER, SPRING (2 REQUIRED) | | 61A-PUR 61B-PUR | SCREW, RING (2 REQUIRED) SCREW, SPOOL COVER |
| | 19-PUR | CAM, CLUTCH | | 64-PUR | |
| | | · | 64 64 A | 64A-PUR | GEAR, WORM DRIVE WASHER |
| | 19A-PUR 19B-PUR | PLATE, CLUTCH CAM BUSHING, CLUTCH CAM PLATE | | 64B-PUR | |
| | 196-PUR | • | | | WASHER (G/METAL) |
| | 20-PUR | SCREW, CLUTCH CAM (3 REQUIRED) SPRING, TORSION | | 64C-PUR 64D-PUR | PLATE, BEARING |
| | 20-PUR 20A-PUR | · | 64D 64E | | RING, RETAINING |
| | 23A-PUR | SPRING, RETURN TORSION | | 66-PUR | SCREW, BEARING PLATE |
| | 24-PUR | NUT, HANDLE | 66 66 A | | HOLDER, BRAKE SHOE |
| | | HANDLE ASSEMBLY | 66A | 66A-SAR | PLATE, BRAKE HOLDER |
| 26 | 26-PUR | BEARING, R.S. PLATE | 66B | 66B-PUR | SCREW, BRAKE (3 REQUIRED) |
| | 26B-SAR | CAST CONTROL CAP ASSEMBLY | 69B | 69B-PUR | E RING, WORM |
| | 26C-PUR 26D-PUR | RETAINER, BEARING | 86 86 A | 86-PUR | WASHER, KEYED TOR |
| | | WASHER, TENSION O RING | 86A | 86A-PUR | WASHER, METAL KEYED TOP |
| 20K | 26R-PUR 27-SAR | L.S. PLATE ASSEMBLY | 98 98S | 98-PUR 98S-PUR | RATCHET, ANTI-REVERSE SLEEVE, ROLLER CLUTCH |
| | | | | | |
| | 27A-PUR | PIN, LOCKING | 110 | 110-PUR 110A-PUR | SCREW, HANDLE LOCK |
| | 27B-PUR | SPRING, PUSH BUTTON BUTTON ASSEMBLY | | | PLATE, HANDLE LOCKING |
| | 27C-PUR 27D-SAR | BRAKE COVER ASSEMBLY | 134 | 134-PUR | GEAR STUD |
| | | | 141 | 141-SAR | CAST CONTROL DIAL ASSEMBLY |
| 29 37 | 29-SAR 37-SAR | SPOOL ASSEMBLY CLUTCH BAR | 144 | 144-SAR 173-PUR | CAST CONTROL DIAL ASSEMBLY RETAINER, L.S. BEARING |
| | | | 173 | | • |
| | 37C-PUR | PLATE, R.S. CLUTCH BAR PLATE, L.S. CLUTCH BAR | 176 | 176-PUR | SHOE, BRAKE (6 REQUIRED) |
| | 37D-PUR | · · · · · · · · · · · · · · · · · · · | 176A | | SPRING, BRAKE SHOE (6 REQUIRED) |
| | 37E-PUR | SCREW, CLUTCH BAR | 183 | 183-SAR | HOUSING FRAME |
| | 37F-PUR | LINK, CLUTCH BAR | | 183A-SAR | THUMB REST |
| 40 | 40-PUR | WASHER, THRUST | | 183B-PUR | SCREW, R.S. THUMB REST (3 REQUIRED) |
| | 40C-PUR | WASHER, METAL THRUST | | 183C-PUR | SCREW, L.S. THUMB REST (2 REQUIRED) |
| | 42-PUR | SHAFT, WORM | 183D | | COVER, FRONT FRAME |
| | 42A-PUR | BUSHING, R.S. WORM | 301 | 301-SAR | MAGNET (5 REQUIRED) |
| | 42L-PUR | WASHER, L.S. WORM | 302 | 302-SAR | HOLDER, MAGNET HOLDER |
| 43 | 43-SAR | GEAR, WORM | | 302C-SAR | PLATE, MAGNET HOLDER |
| 43A | 43A-SAR | L S WORM BEARING | 3020 | 302D-SAR | SPRING, MAGNET HOLDER (2 REQUIRED) |

NOTE:Many of www.pennparts.com schematics include changes that were either made by Penn, or errors found and corrected by our parts dept.

SBT Ver. 050208 (based on Penn's Rev 00)