

_		arts list for:			International Torque
KEY	PART		KEY		
NO	NO.	DESCRIPTION	NO	NO.	DESCRIPTION
1	1-200T	RIGHT SIDE PLATE	31A	31TA-300T	SCREW R.S. (2 REQUIRED)
1C	1C-200T	COVER, RIGHT SIDE	31B	31TB-300T	SCREW L.S. (4 REQUIRED)
1D	1D-200T	BACKING PLATE	31C	31T-15KG	SCREW R.S. (2 REQUIRED)
4	4-60	GRAPHITE WASHER	31D	31TA-200T	SCREW R.S. (2 REQUIRED)
4A	4-200T	GRAPHITE WASHER	32	39-10	SCREW
5	5-200T	MAIN GEAR	33	33N-113	ROD CLAMP
6	6-300T	DRAG WASHER (4 REQUIRED)	34	34-16VS	ROD CLAMP SCREW (2 REQUIRED)
7	7-300T	METAL DRAG WASHER (3 REQUIRED) 35	35-60	CLICK TONGUE
8	8-113HN	SPRING RETAINER	36	36-300T	CLICK BUTTON
10	10-300T	DRAG STAR	36A	36A-300T	WASHER, CLICK BUTTON
10C	10C-113HN	DETENT SPRING	40	40-300T	BEARING CUP, LEFT SIDE
11	11-300T	ECCENTRIC JACK	44	44-300T	SCREW (4 REQUIRED)
12	12-300T	PINION YOKE	44A	44-4200	SCREW (2 REQUIRED)
13	13-200T	PINION	55A	55-113HN	BALL BEARING (MAIN GEAR)
13A	13A-200T	PINION PIN	55B	55-910	BALL BEARING (SPOOL ASSEMBLY)
14	14-300T	DOG SPRING (2 REQUIRED)	62	62-309	CLICK SPRING
15	15-200T	DOG, ANTI-REVERSE (2 REQUIRED)	63	63-30T	SCREW (GEAR STUD)
16	16-200T	ECCENTRIC JACK SCREW	63A	63-209	SCREW (CLICK SPRING)
18	18-60	CLUTCH SPRING (2 REQUIRED)	69B	69B-600	RETAINING RING
18C	18-505	TENSION WASHER (4 REQUIRED)	86	86-300T	WASHER, KEYED
19	19-200T	ECCENTRIC	97	97-300T	BRIDGE (F/GEAR STUD)
20	20-321LH	ECCENTRIC SPRING	98	98-300T	GEAR SLEEVE
21	21-200T	ECCENTRIC LEVER ASSEMBLY	98B	98B-525	CLUTCH BEARING
22	22-60CH	SCREW, ECCENTRIC LEVER	98S	98S-525	CLUTCH BEARING SLEEVE
23	23-555	HANDLE NUT	101	101-80ST	SCREW, STAND (4 REQUIRED)
24	24-200T	HANDLE	102	102-60	PIN, GEAR SLEEVE
26	26-113HN	BEARING CUP ASSEMBLY	110A	110A-555	HANDLE NUT CAP
26A	26A-2.5FR	BALL BEARING	149	149-45	ROD CLAMP NUT (2 REQUIRED)
26B	26-200T	ECCENTRIC BUSHING	149A	149-200	ROD CLAMP HEX NUT (2 REQUIRED)
27	27-200T	LEFT SIDE PLATE ASSEMBLY	183	183-200T	FRAME
29	29L-200T	SPOOL ASSEMBLY	205	205-300T	WASHER, GEAR STUD
30	30-16VS	STAND			

NOTE: Many of www.pennparts.com schematics include changes that were either made by Penn, or errors found and corrected by our parts dept.

SBT VER. 062611 (BASED ON PENN'S REV 9)

This	part was	on the ori	ginal scl	nematic:	

ECCENTRIC LEVER WASHER

21A 21A-200T E Replaced By:

26B 26-200T ECCENTRIC BUSHING

This part was removed in Rev2

154 154-117 CLICK TONGUE SHIM

8A 8A-300T SHIM

These were removed in Rev9

 16B
 16B-200T
 ECCENTRIC SCREW WASHER

 20A
 20-60L
 ECCENTRIC SPRING

 29A
 29A-200T
 SPOOL WASHER THICK

 29B
 29B-200T
 SPOOL WASHER THIN

These parts were on the original schematic:

18A 18A-300T CLUTCH SPRING POST (2 REQUIRED)
 54B 54B-130 DOWEL PIN (2 REQUIRED)
 158 158-300T DOG PIN (2 REQUIRED)
 They are part of the 1-200T and 1-300T plates

Penn is not offering them as servicable parts

These three pieces on original schematic:

40	40-300 I	BEARING CUP, LEFT SIDE	
55	55-113H	BALL BEARING (LEFT SIDE PLATE)	
120	120-113H	O-RING, LEFT SIDE PLATE	
	Are sold together as an assembly under # 40-300		