




INTERNATIONAL® 975LD SPECIFICATIONS AND PARTS LIST

Congratulations on the purchase of your new Penn International® baitcaster! For general features, operating instructions, casting control information, maintenance, lubrication and servicing, please refer to the main International® manual (featuring the 965). Keep this sheet for reference to 975LD part numbers and specifications. Good fishing!

See Notes

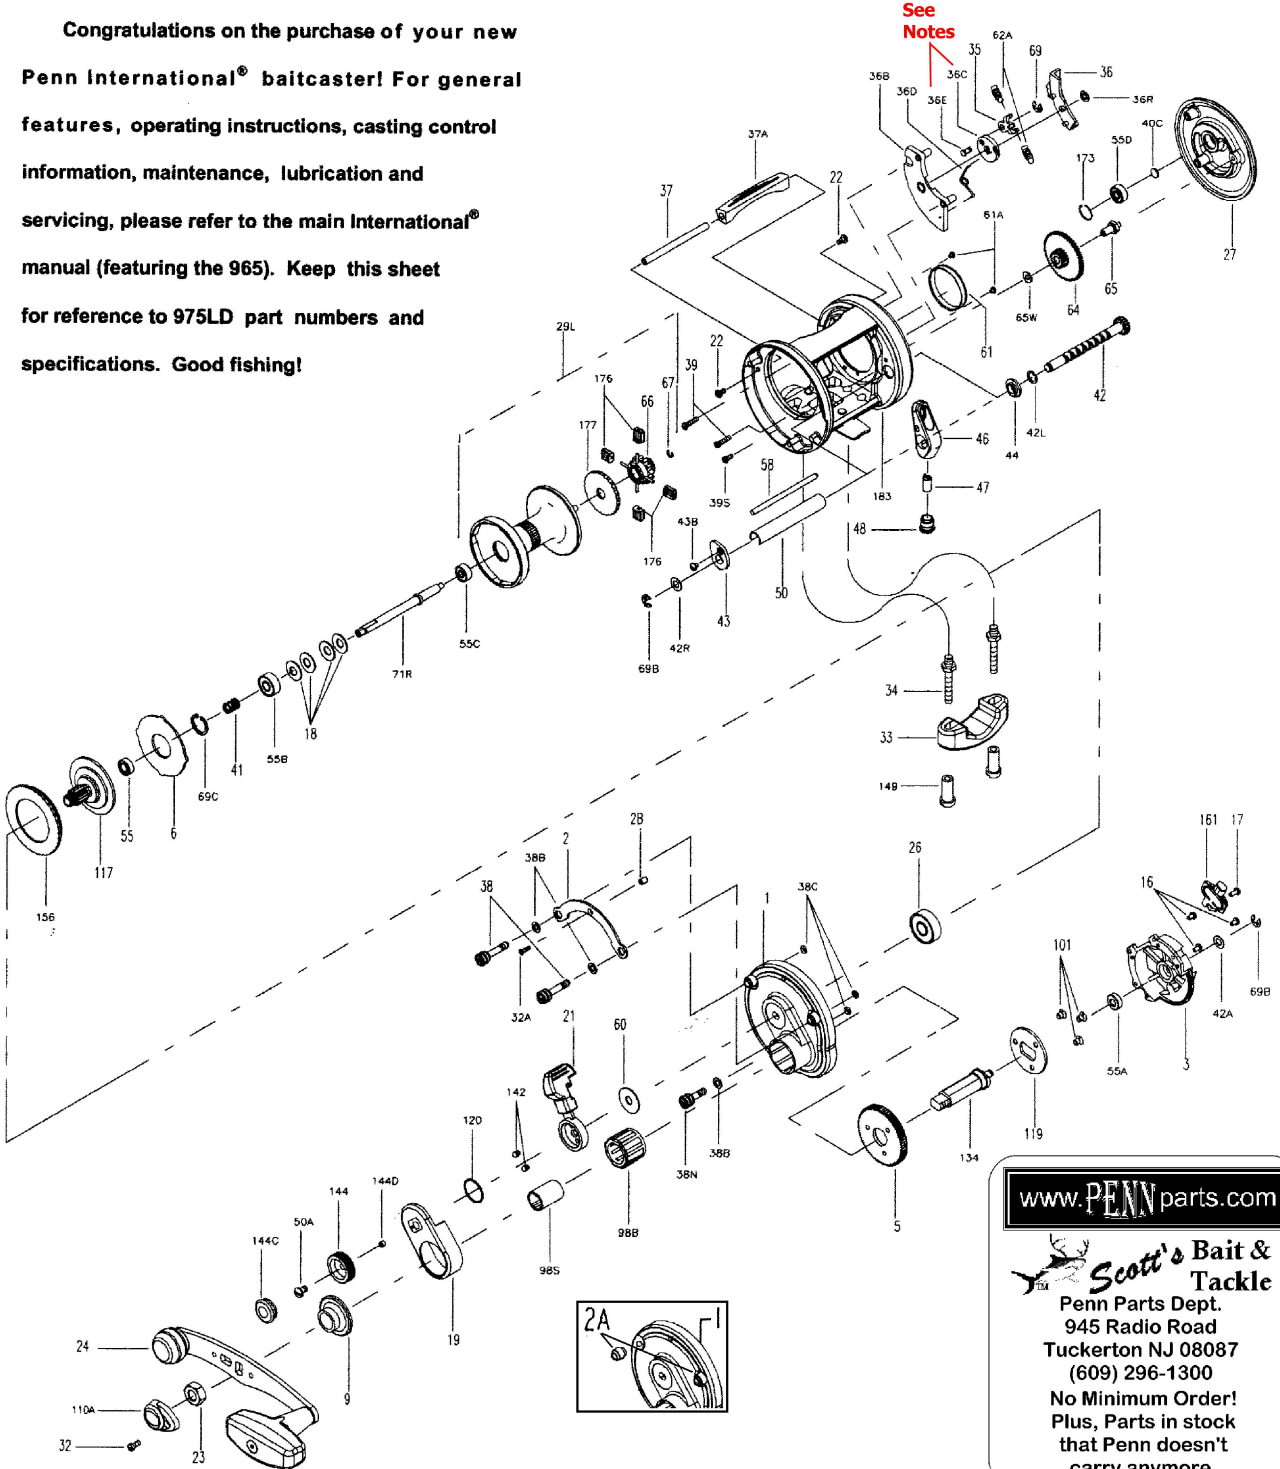

www.PENNparts.com

Scott's Bait & Tackle
 Penn Parts Dept.
 945 Radio Road
 Tuckerton NJ 08087
 (609) 296-1300
 No Minimum Order!
 Plus, Parts in stock
 that Penn doesn't
 carry anymore.

SBT Ver. 050516

Penn Reel Parts list for:

Model: 975LD

KEY PART NO	PART NO.	DESCRIPTION	KEY PART NO	PART NO.	DESCRIPTION
1	1-975LD	RIGHT SIDE PLATE	46	46-975	LINE GUIDE
2	2-975LD	QUADRANT RING	47	47-975	PAWL
2A	2A-975LD	QUADRANT BUSHING, LARGE (2 REQUIRED)	48	48-965	PAWL COVER SCREW
2B	2B-975LD	QUADRANT BUSHING	50	50-975	WORM SHIELD
3	3-975LD	INNER R.S. PLATE	50A	50-716	PRESET KNOB SCREW
5	5-975LD	MAIN GEAR	55	55-965	BALL BEARING
6	6-975LD	DRAG WASHER HT-100	55A	55A-965	GEAR STUD BUSHING
9	9-975LD	GEAR STUD COVER	55B	55-116	SPOOL BEARING
16	16-975LD	BRIDGE SCREWS (4 REQUIRED)	55C	55-113H	SPOOL BEARING
17	17-975LD	LONG BRIDGE SCREW	55D	55-113H	LEFT SIDE BEARING
18	18-975LD	DISC CLUTCH SPRING (4 REQUIRED)	58	58-975	LINE GUIDE POST
19	19-975LD	CAM ASSEMBLY	60	60-975LD	ECCENTRIC WASHER
21	21-975LD	CLUTCH RELEASE BUTTON	61	61-965	BRAKE DRUM
22	50-716	POST SCREW (2 REQUIRED)	61A	43B-965	BRAKE DRUM SCREW (2 REQUIRED)
23	23-555	HANDLE NUT	62A	62A-965	CLICK SPRING (2 REQUIRED)
24	24-975	HANDLE ASSEMBLY	64	64-975	IDLER GEAR
26	26N-25	R.S. PLATE BEARING	65	65-965	IDLER GEAR PIN
27	27-975	L.S. PLATE	65W	65W-965	IDLER GEAR WASHER
29L	29L-975LD	SPOOL ASSEMBLY	66	66M-965	SPOOL GEAR CLICK RATCHET
32	32-15	HANDLE CAP SCREW	67	67-16S	LOCK RING
32A	32-975LD	QUADRANT SCREW	69	69B-50	RETAINING RING
33	33-113	ROD CLAMP	69C	69-975LD	SPOOL RETAINING RING
34	34-975	ROD CLAMP SCREW (2 REQUIRED)	69B	69B-600	RETAINING RING (2 EQ.)
35	35-965	CLICK TONGUE	71R	71R-975LD	SPOOL SHAFT
36	36-975	CLICK BUTTON	98B	98B-525	ROLLER BEARING
36B	36B-975	CLICK HOUSING	98S	98S-525	BEARING CLUTCH SHAFT
36D	36D-965	CLICK WHEEL SPRING	101	101-50S	RETAING PLATE SCREW (3 REQUIRED)
36R	36R-965	RETAINING RING	110A	110A-555	HANDLE NUT CAP
37	37-975	THUMB BAR POST	117	117-975LD	DRIVE PLATE ASSEMBLY
37A	37A-975	THUMB BAR	119	119-30S	RETAINING PLATE
38	38-975LD	TAKE-APART SCREW (2 REQUIRED)	120	26R-965	ECCENTRIC O-RING
38B	38BN-965	SIDE PLATE WASHER (3 REQUIRED)	134	134-975LD	GEAR STUD
38C	38CN-965	SCREW 'O' RING	142	142-975LD	CAM FOLLOWER (2 REQUIRED)
38N	38N-965	TAKE-APART SCREW	144	144-975LD	PRESET KNOB
39	39-965	L.S. PLATE SCREW (2REQUIRED)	144C	144C-975LD	PRESET KNOB CAP
39S	39S-965	L.S. PLATE SHORT SCREW	144D	144D-975LD	PRESET KNOB CLICK
40C	40C-310	METAL THRUST WASHER	149	149-45	ROD CLAMP NUT (2 REQUIRED)
41	41-975LD	BEARING SPRING	156	156-975LD	DRAG COVER
42	42-975	WORM SHAFT	161	161-975LD	STRIKE BUTTON
42A	42R-965	METAL WASHER	173	173-965	LEFT SIDE BEARING RETAINER
42L	42L-965	L.S. WORM SHAFT WASHER	176	176-975LD	ANTI-BACKLASH BRAKES (4 REQUIRED)
42R	42R-965	R.S. WORM SHAFT WASHER	177	177-965	BRAKE SELECTION KNOB
43	43-965	R.S. WORM SHAFT BUSHING	183	183N-975LD	FRAME ASSEMBLY
43B	43B-965	WORM BUSHING SCREW			
44	44-975	L.S. WORM SHAFT BUSHING			

NOTE: Many of www.pennparts.com schematics include changes that were either made by Penn, or errors found and corrected by our parts dept.

SBT Ver. 0505216 (based on Penn's Rev. 6)

Early Run: Design change to click wheel sometime between Rev. 0 and Rev. 3

<u>ORIGINAL:</u>			<u>REDESIGNED:</u>		
36C	36C-965	CLICK WHEEL w/2 plastic pins (Pin tended to shear off.)	36C	36C-965	CLICK WHEEL w/1 plastic pin
			36E	36E-965	CLICK TONGUE PIN