



VERSIONS

38A

95B



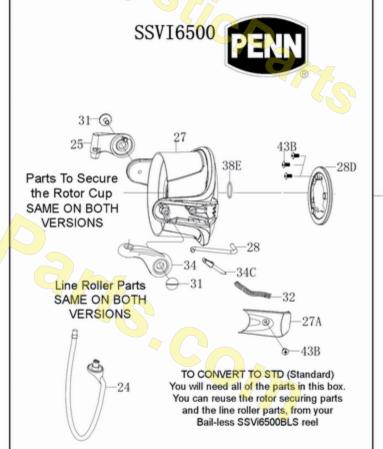



Housing is just here for reference because of Rotor Brake positioning

Penn Reel Parts list for Model: SSVi6500BLS Spinfisher VI BAIL-LESS (1481270) Penn Reel Parts list for Model: SSVi6500 Spinfisher VI (Standard) (1481264)

## Converting in either direction changing from Std to BLS or BLS to Std

For the std to BLS conversion, all the line roller pieces are transferred to the BLS rotor assembly including the screw, and capped with the #26 slider Both parts use the same parts for the line roller assembly and to secure the rotor. Those parts in common are also listed here for reference.

SSVi6500B <mark>L</mark> S (Bail-less)									
KEY	Order	PUREFISHING	PEN <mark>N PART</mark>						
<u>NO</u>	QTY	NO.	NO.	DESCRIPTION					
1	1	1489453	1-SSVi6500BLS	HOUSING, BODY ASSEMBL					
47	1	1489460	47-SSVi6500BLS	SPOOL ASSEMBLY					
If changing from STD to BLS, changing the above is OPTIONAL									
		It would just pro	perly label the reel						
These parts to CONVERT to BLS									
KEY Order PUREFISHING PENN PART									
<u>NO</u>	QTY	NO.	NO.	DESCRIPTION					
27	1	1489455	27-SSVi6500BLS	ROTOR					
27J	1	1489456	27J-SSVi6500BLS	CLUMP WEIGHT					
27K	1	1489457	27K-SSVi6500BLS	CLUMP WEIGHT SCREW					
27M	1	1489458	27M-SSVi6500BLS	CLUMP WEIGHT					
27N	1	1489459	27N-SSVi6500BLS	CLUMP WEIGHT SCREW					
26	1	1489454	26-SSVi6500BLS	LINE SLIDER					

SSVi6500 (Standard reel)									
KEY	Order	PUREFISHING	PENN PART						
<u>NO</u>	QTY	<u>NO.</u>	NO.	DESCRIPTION					
1	1	1489446	1-SSVi6500	HOUSING, BODY ASSEMBLY					
47	1	1489442	47-SSVi6500	SPOOL ASSEMBLY					
	If changing from BLS to STD changing the above is OPTIONAL								
	It would just properly label the reel								
$1/\sim$									
X III									
	These parts to CONVERT to Standard reel with Bail Wire								
KEY	Order	PUREFISHING	PENN PART						
<u>NO</u>	QTY	NO.	<u>NO.</u>	DESCRIPTION					
31	2	1489310	31-SSVi7500	BAIL ARM SCREW (2 REQUIRED)					
25	1	1489433	25-SSVi6500	BAIL HOLDER (BAIL CAM)					
27	1	1489434	27-SSVi6500	ROTOR					
28	1	1489436	28-SSVi6500	TRIP LEVER					
34C	1	1489399	34C-SSVi5500	PIVOTARM					
32	1	1489397	32SSVi5500	BAIL SPRING					
27A	1	1489435	27A-SSVi6500	BAIL PIV <mark>OT COVER</mark>					
43B	4	1489213	43B-SSVi3500	SCREW (1 for Pivot Cover, 3 for the Rotor Brake)					
34	1	1489438	34-SSVi6500	BAIL ARM					
24	1	1489452	24-SSVi6500	BAIL WIRE					
28D	1	1489437	28D-SSVi6500	ROTOR BRAKE					

	These parts are used in BOTH BLS and STD versions for line roller					These parts are used in BOTH BLS and STD versions to secure the Rotor			
Ordering needed only if worn or damaged				Ordering needed only if worn or damaged					
KEY	Order	PUREFISHING	PENN PART		KEY	Order	PUREFISHING	PENN PART	
<u>NO</u>	QTY	<u>NO.</u>	<u>NO.</u>	DESCRIPTION	<u>NO</u>	QTY	<u>NO.</u>	<u>NO.</u>	DESCRIPTION
132	1	1489410	132-SSVi5500	LINE ROLLER COLLAR	38A	3	1489316	38A-SSVi7500	ROTOR NUT LOCK PLATE SCREW (3 REQUIRED)
132B	reuse	not available	132B-SSVi5500	WASHER (Penn has not given part #)	95B	1	1489223	95B-SSVi3500	ROTOR NUT LOCKING PLATE / COVER
35A	1	1242222	35A-5000BTL	LINE ROLLER BALL BEARING	38F	1	1489402	38F-SSVi5500	SEAL RING (FOR MAIN SHAFT)
35	1	1489400	35-SSVi5500	LINE ROLLER	38	1	1489401	38-SSVi5500	ROTOR NUT
132A	1	1489411	132A-SSVi5500	LINE ROLLER BUSHING	38E	2	1489203	38E-SSVi3500	ROTOR O-RING (2 REQUIRED)